



Manual

Bluetooth Speaker



Product number: EP18131/33/35

PACKAGE CONTENTS

Before attempting to use this device, please check the packaging and make sure the following items are contained in the package:

Number of Pieces	Name	Note
1	Bluetooth speaker	integrated battery
1	charging cable	-
1	AUX cable	-
1	user's manual	-

TECHNICAL DETAILS

Frequency	100Hz-20KHz
Output	5 Watt
Supported audio format	MP3, WAV
SD / TF card	up to 32GB
Sensitivity	83dB +-2dB
Bluetooth version	4.2
Bluetooth transmission range	≤ 10m
Bluetooth usage current	< 30mA
Bluetooth stand-by current	< 15mA
Bluetooth transmission frequency	2.4GHz-2.480GHz
Bluetooth frequency band	UHF
Bluetooth transmission rate	24Mbps
Max. transmission	2.07 mW
Stand-by usage	≤ 30mA
Charging voltage	DC 5V / 500mA
Battery capacity	1500 mAh
Working temperature	-10~60°C

FM	87,5-108MHz
Max. playtime	6-8h
Size, Weight	113mm*57.5mm*144mm, 415g

! Note:

- Please charge the battery before using the speaker the first time for about ten hours to ensure a maximum life span.
- Just use the right charging cables.
- To reset the speaker press + and - simultaneously.

BLUETOOTH PAIRING

Step 1: Switch on the speaker. **NO** memory card must be inserted to use Bluetooth function. Either use NFC or proceed with step 2.

Step 2: Go to your telephone's settings and open and activate the Bluetooth option. In the list of found devices you should now find „LEICKE EP18133“. Connect your device and if a code is needed just enter „0000“.

Step 3: The speaker is now connected. The pairing will be saved for future usage.

MP3 PLAYER

The MP3 function will be started by inserting a memory card. Maximum support of 32GB cards.

RADIO

Before switching the speaker on and using the radio function please insert the charging cable whereas the other end of the cable has to be free. It works as antenna.

AUX MODE



If you insert an audio cable the speaker will output the audio signal of the connected source device.

CHARGING


Connect the device with the charging cable to a USB port. While charging the red LED will glow. It stops glowing when charging is completed. Switch the speaker off when not using it to ensure maximum battery life span.

Note: Switch the speaker off during charging to ensure maximum charging results.



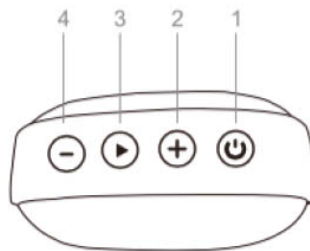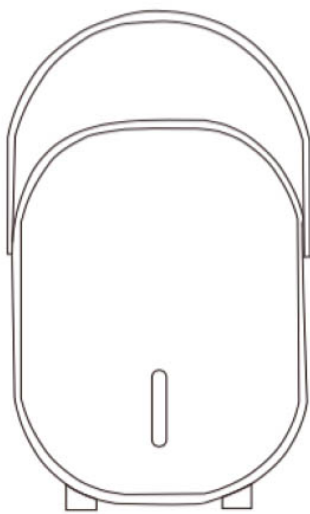

CONTROLS AND OPERATION

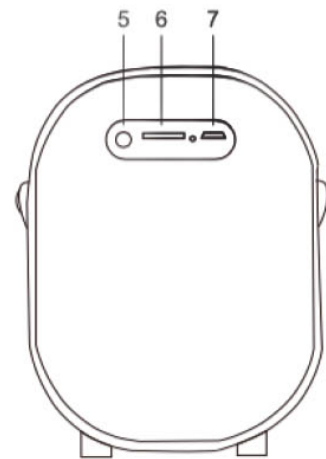





- 1 Power
- 2. Increase volume/next song
- 3. Play/pause
- 4. Decrease volume/last song



- 5. AUX socket
- 6. TF card slot
- 7. Charging socket

Buttons	TF card mode		Bluetooth Mode			Hands Free Mode	
	Long press	Short press	Long press	Short press	Double Click	Long press	Short press
	Turn on /off	Switch Mode	Turn on /off	Switch Mode	/	/	Switch between speaker to phone
 Play/Pause	/	Play/Pause	Disconnect the current connection into pairing mode	Play/Pause or automatically connected.	Back to dial the telephone	Reject call	Answer/hang up the call
	Decrease volume	Previous song	Decrease volume	Previous song	/	Decrease volume	Decrease volume
	Increase volume	Next song	Increase volume	Next song	/	Increase volume	Increase volume

Buttons	AUX Mode		FM Mode		
	Long press	Short press	Long press	Short press	Double Click
	Turn on /off	Switch Mode	Turn on /off	Switch Mode	/
 Play/Pause	/	Mute / Resume play	Auto search FM station	Mute / Resume play	/
	Decrease volume	Decrease volume	Decrease volume	Previous radio station	/
	Increase volume	Increase volume	Increase volume	Next radio station	/

TROUBLE SHOOTING

First check if the speaker is charged and switched on.

Problem	Possible Cause/Possible Solution
Playing via Bluetooth not possible	<ul style="list-style-type: none">• Is pairing with your device successfully completed?• Try to connect again by switching off and on again.• Check if speaker is in radio mode.• Check if speaker is in range of your device.• Is volume high enough.
No playback from Micro SD / TF card	<ul style="list-style-type: none">• Are there music files saved on the card.• Try going to the next song by short pressing the forward button.• Is the memory card intact?
No playback from radio	<ul style="list-style-type: none">• Is the reception disturbed? Try switching the channel with backward or forward.

Our customer support will be glad to help you at info@leicke.com.

SAFETY NOTES

For your own safety and for long enjoyment of our product, please follow the following safety instructions:

- Please use device as described in the manual.
- To protect your hearing and widen the life span of the speaker, maximum volume should not be adjusted over a longer period of time.
- Use 5V /1A power supplies only. The connection of power supplies with higher voltage leads to irreparable damage.
- Please keep power adapter and speaker dry and use in dry environment only. Do not touch with wet hands.

-
- Keep away from damp, high temperature, dusty, erosive and oxidative environment.
 - Keep safe from being hit or falling down.
 - Turn off power when device is not in use for a longer time.
 - Do not open cover and do not touch inner parts.

FCC INTERFERENCE STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures: - Reorient or relocate the receiving antenna. - Increase the separation between the equipment and receiver. - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. - Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following conditions:

1. This device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

IMPORTANT NOTE:

Radiation Exposure Statement:

1. This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. End users should follow the specific instructions in the user's manual to comply with the FCC rules.
- This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

DISPOSAL

This device contains materials that must not be disposed of as household waste. Please check local laws concerning the applicable disposal regulations. Protect the environment by participating in recycling programs.



DECLARATION OF CONFORMITY

LEICKE GmbH herewith declares that the device complies with the RED 2014/53/EU and Rohs 2011/65/EU regulations. The declaration of conformity can be found at www.leicke.com. Go to the product you bought and look at downloads.



CONTACT

If you have any questions, please feel free to contact us.

PRODUCTION & WHOLESALE

LEICKE GmbH
Dohnanyistr. 28
04103 Leipzig
Germany

Web: www.leicke.com

Mail: info@leicke.com

