



**Manual**  
Bluetooth-Speaker DJ Rxxxx



**Product number: EP18177**

## PACKAGE CONTENTS

Congratulations on the purchase of your new device. You have selected a high-quality product. Before attempting to use this device, please check the packaging and make sure the following items are contained in the package:

Number of Pieces	Name	Note
1	Bluetooth-Speaker	integrated battery
1	Adapter	DC 9V 1,5A
1	AUX cable	3.5mm
1	Remote control	-
1	User's manual	-

## TECHNICAL DETAILS

Frequency	50Hz-20KHz
Power	60W
Supported audio format	MP3, WAV files
SD / TF card	up to 32 GB
Sensitivity	80db
Bluetooth version	V5.0
Bluetooth transmission range	≤ 10m
Bluetooth usage current	< 30mA
Bluetooth stand-by current	< 15mA
Bluetooth transmission frequency	2.4GHz-2.480GHz
Bluetooth frequency band	UHF
Bluetooth transmission rate	24Mbps
Max. transmission	2.42 mW
Stand-by usage	Up to 40 h
Charging voltage	DC 9V / 1500mA
Battery capacity	7,4V 10000mAh

Working temperature	-10~40°C
Max. playtime	Up to 9h
Size, Weight	51.5 cm* 21 cm* 21 cm, 4500g


### COMPATIBILITY

Compatible with tablets, smartphones, PCs, notebooks which have Bluetooth or AUX output.

### CAUTION

1. Do not expose the device to dripping or splashing liquid.
2. Do not place objects filled with liquid on the unit.
3. Do not block the ventilation openings.
4. When using a high output signal, do not turn the volume up to maximum to avoid distortion.

### FUNCTION PANEL

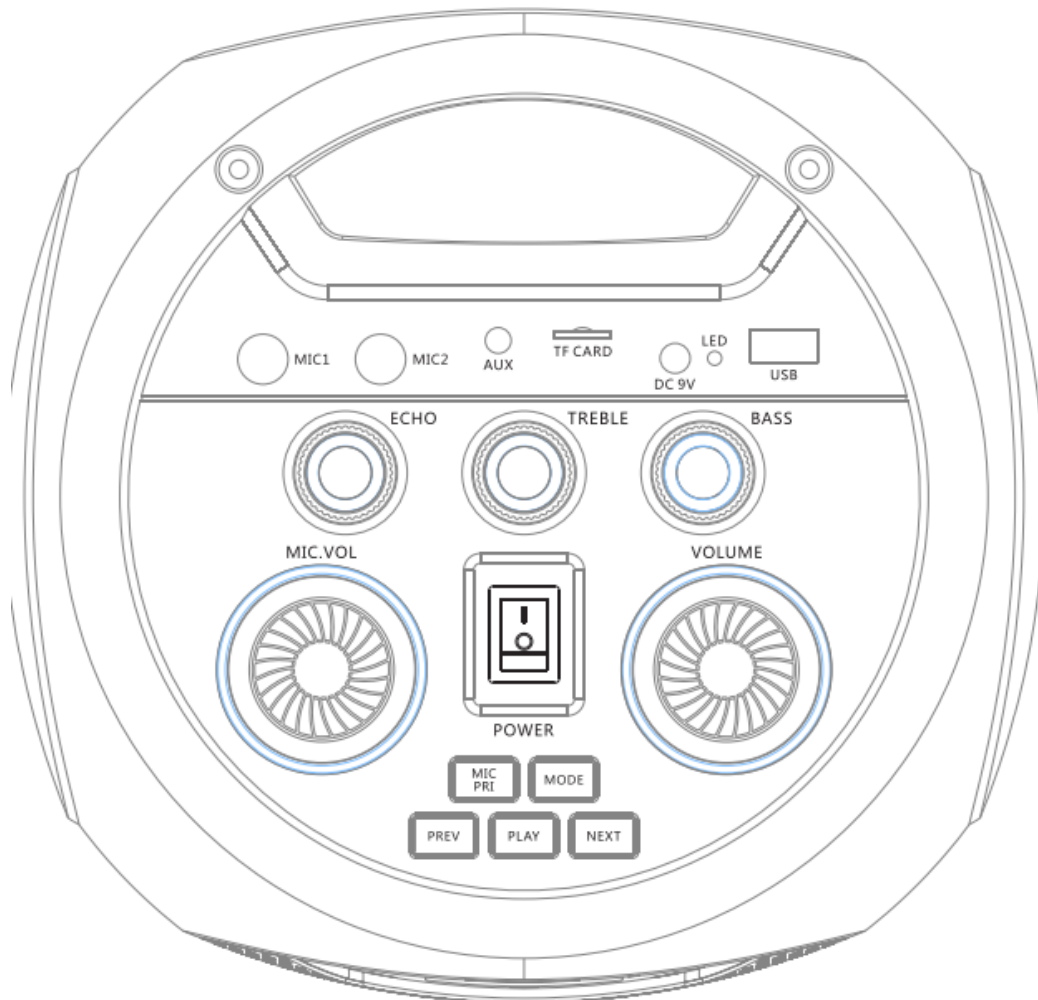

---

## INTERFACE DESCRIPTION

1. MODE key: Switch to TF/USB/FM/AUX/Bluetooth. (If a Bluetooth connection exists, press the "Mode" key for 3 seconds to disconnect the Bluetooth connection and return to the connection status for another phone).
2. PLAY key: Press the "Play" key to pause and resume playback. In FM mode, press and hold the "Play" key to access the automatic search station.
3. PREV key: Press the PREV key briefly to go to the previous song or radio station.
4. NEXT key: Shortly press the NEXT key to go to the next song or radio station.
5. MIC PRI key: Press the key and the display shows " on". The unit switches to the microphone priority status. Press the MIC PRI key again and the display shows " off". The microphone priority is closed. Press the "MIC PRI" key for 3 seconds to deactivate the speaker lighting. Press the key again for 3 seconds to activate the loudspeaker lighting.
6. USB interface: Insert the USB disk in USB mode.
7. TF card interface: Insert the TF card directly for playback.
8. AUX: Connect your device (mobile phone/tablet) to the device with an AUX-IN cable.
9. MIC1/MIC2: Insert a microphone for amplification.
10. DC9V: Connect the adapter to charge the device.
11. VOLUME button: To adjust the volume of the device.
12. Echo button: To adjust the sound effect.
13. Treble control: To adjust the treble of the speaker.
14. Bass control: To adjust the bass of the loudspeaker.
15. POWER: To switch the unit on/off.

## BLUETOOTH MODE

1. Press the MODE button to switch to Bluetooth mode, the LED indicator will flash blue.
2. Open Bluetooth in your phone and search for "EP18177". Connect with one click and enjoy wonderful music after successful connection.

## MUSIC MODE

1. When a TF card or USB memory device is inserted, the unit automatically switches to music playback mode.
2. Press the play button/PLAY button to pause or resume playback in Bluetooth/TF/USB mode.
3. Press the PREV button to play the previous song. (Only works in Bluetooth/USB/TF mode).
4. Press the NEXT button to play the next song. (Works only in Bluetooth/USB/TF mode).

---

## FM-MODE

1. Press the MODE button to switch to FM mode.
2. Press and hold the Play button to search automatically for a station. When the station search is complete, the station will be saved automatically.
3. Press the NEXT/PREV buttons to change the radio station.
4. Press the MODE button to switch to other functions.

## REC-FUNCTION (control by remote)

1. Record a sound source only when the unit is connected to a microphone and then save it to a USB memory device or TF card. If both USB media and TF card are inserted, the USB memory has priority.
2. Press " REC" to start recording.
3. Press " REC play" to start playing the recording.

## Operation of the Microphone

1. Turn on the microphone priority function. When you sing into the microphone, the background music stops and you only hear the microphone sound. If no sound source comes out of the microphone, the background volume is automatically restored.
2. Press the MIC PRI key again, the display shows "off". The microphone priority function will be closed.


## TWS function



1. In Bluetooth mode, long press the PLAY/PAUSE key for three seconds on either speaker. This starts the automatic TWS pairing. A „DUDU“ tone indicates successful pairing.
2. Now open the Bluetooth menu on your phone and search for the Bluetooth pairing name. After successful pairing, one speaker becomes the left channel and the other the right channel.
3. Press and hold the MODE key to automatically switch off the TWS function again.

## CHARGING INSTRUCTIONS

When the battery is charging, the battery indicator on the function panel lights up red. When the battery is fully charged it lights up green. When the battery is low, the battery symbol on the LED screen flashes. Please recharge it in time.
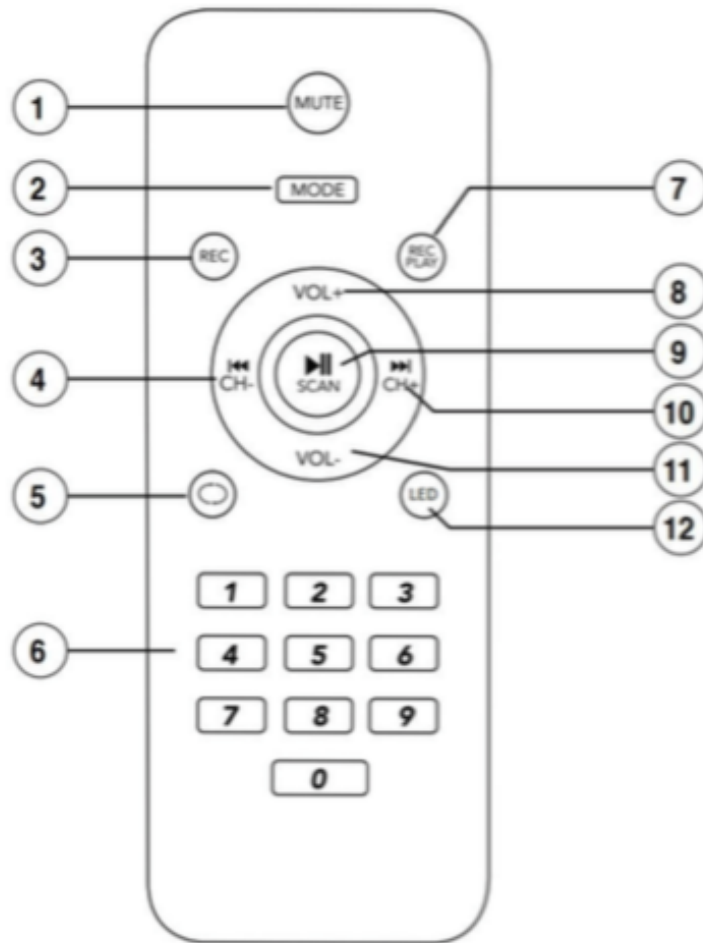
## REMOTE INSTRUCTIONS



1. Mute: Press this button to mute the music.
2. MODE: Switch mode to FM/BT.
3. REC: Record music.
4. CH-: Last channel / previous Song
5. : Repeat a single or all tracks.
6. Digit 0-9: Change the song that was saved on the USB stick/ TF card.
7. REC Play: Play recorded music.
8. VOL+: Turn up the volume.
9. SCAN: Longpress in FM mode to scan the channel. Press briefly to pause the music.
10. CH+: Next channel / Next song.
11. VOL-: Turn down the volume.
12. LED: Press this key to switch the speaker lighting on/off. 

### SAFETY NOTES

For your own safety and so that you can enjoy our product for a long time, please observe the following safety instructions:

- 
- Do not expose this product to a wet environment or high temperatures. It must not stand in the rain or fall.
  - To reduce the risk of electronic shock or fire, do not remove the case cover, but consult a qualified electrician.
  - In the rare event of a malfunction, do not attempt to repair the unit yourself. Contact a certified service technician for proper diagnosis and repair.
  - If fragments or liquids fall into the equipment box, turn off the power immediately. It must not be used again until it has been checked by qualified personnel.
  - The device should be placed on a horizontal, flat and solid surface with good ventilation.
  - Do not install the unit in or near a place where it may come into contact with rain, moisture or other liquids.
  - If the battery is incorrectly replaced, an explosion may occur. Please replace it with a battery of the same or equivalent type.
  - To avoid an accidental charging, the original adapter of this product must be used to charge the battery. If the accident or machine damage is caused by other original adapters, the warranty is void.
  - To avoid battery explosion, do not install the unit in areas of extreme heat, fire or in areas exposed to direct sunlight.

#### **FCC INTERFERENCE STATEMENT**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures: - Reorient or relocate the receiving antenna. - Increase the separation between the equipment and receiver. - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. - Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

#### **IMPORTANT NOTE:**

Radiation Exposure Statement:

1. This equipment complies with FCC radiation exposure limits set forth for an

uncontrolled environment. End users should follow the specific instructions in the user's manual to comply with the FCC rules.

- This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

#### **DISPOSAL**

This device contains materials that must not be disposed of as household waste. Please check local laws concerning the applicable disposal regulations. Protect the environment by participating in recycling programs.



#### **DECLARATION OF CONFORMITY**

LEICKE GmbH herewith declares that the device complies with the RED 2014/53/EU and Rohs 2011/65/EC Annex II 2015/863 regulations. The declaration of conformity. can be found at [www.leicke.com](http://www.leicke.com). Go to the product you bought and look at downloads.

[www.leicke.com/de/products/EP18177](http://www.leicke.com/de/products/EP18177)



#### **Contact**

**You can find our manual on our Website.**

**Go to the product you bought and look at downloads.**

**If you have any questions, please feel free to contact us.**

#### **PRODUCTION & WHOLESALE**

**LEICKE GmbH**

Stöhrerstr. 17

04347 Leipzig

Germany

**Web: [www.leicke.com](http://www.leicke.com)**

**Mail: [info@leicke.com](mailto:info@leicke.com)**

