

Users Manual

Bluetooth-TWS-Earbuds



Product number: EP18208+EP18210

PACKAGE CONTENT

Before using the machine, please read the user manual carefully and make sure that the following items are included in the package:

Quantity	Accessory	Note
1	Wireless earbuds	Integrated battery
1	Charging cable	-
1	Charging station	-
1	Manual	-

TECHNICAL DETAILS		
Data connection	Bluetooth 5.0	
Frequency range	2.402 GHz - 2.480 GHz	
Frequency	UHF	
Max. transmission	2,92 mW	
Transmission range	10 m	
Running time	Up to 3 h	
Stand-by time	Up to 100 h	
Charging time	ca. 1,5 h	

FUNCTION

Switch on:

The earphones switch on automatically when they are removed from the charger.

Switch them off:

Tap the R/L touch sensor for 4 seconds. "Switch off" sounds.

Pairing:

When you remove the earphones from the charger, the machine switches on automatically and switches to TWS pairing mode (if not, please reset the earphones).

The earphones are paired automatically. Then search and select "LEICKE EP18208" or "LEICKE EP18210" in the Bluetooth menu of your phone.

Incoming call:

Briefly tap the R/L touch sensor to answer/end the call. Long tap on the R/L touch sensor to reject the call.

Voice Assistant:

Triple tap the I/r multifunction button.

Music control:

Briefly tap the I/I touch sensor to play or pause music.

Tap the right touch sensor for 1-2 seconds to go back to the previous track. Tap the left touch sensor for 1-2 seconds to move to the next track.

Call last number:

Double-click the R/L multifunction button.

Low battery warning:

When the battery is low, the "Please Charge" alarm sounds and the LED flashes red, then the earphone switches to standby mode.

Charging the earphones:

Insert the earphones into the charging station. The red LED lights up and goes out when the battery is fully charged.

Charging the charging station:

Charge the charging station using the type C cable supplied. When the battery is fully charged, the red LED is constantly lit.



SAFETY NOTES

For your own safety and so that you can enjoy our product for a long time, please observe the following safety instructions:

- Please use device as described in the manual.
- Please keep the device dry and use in dry environment only. Do not touch with wet hands.
- Keep away from damp, high temperature, dusty, erosive and oxidative environment.
- Do not open cover and do not touch inner parts.

DISPOSAL

This device contains materials that must not be disposed of as household waste. Please check local laws concerning the applicable disposal regulations. Protect the environment by participating in recycling programs.

DECLARATION OF CONFORMITY

LEICKE GmbH herewith declares that the devices EP18208 or EP18210 comply with the RED 2014/53/EU and ROHS 2011/65/EC Annex II 2015/863 as last amended by Directive(EU) 2017/2102 regulations. The declaration of conformity can be found at: www.leicke.eu/de/products/EP18208 www.leicke.eu/de/products/EP18210

CONTACT

Please contact us in case of questions!

PRODUCTION & DISTRIBUTION

LEICKE GmbH

Dohnanyistr. 28 04103 Leipzig Deutschland

Web: www.leicke.com Mail: info@leicke.com





F