



# MANUAL

Bluetooth-TWS-Headset



Product number: EP18221

---

## PACKAGE CONTENT

Congratulations on the purchase of your new device. Before attempting to use the device read the instructions carefully and make sure the following objects are included in the packaging:

<b>Anzahl</b>	<b>Zubehör</b>	<b>Bemerkung</b>
1	Wireless headset	integrated battery
1	iOS cable	-
1	Charging Station	-
1	Manual	-

## TECHNICAL DETAILS

 
Data connection	Bluetooth 5.0
Frequency range	2.402 GHz – 2.480 GHz
Frequency	UHF
Max. transmission	2.92 mW
Transmission range	10 m
Run time	Up to 12 h
Stand-by-time	Up to 100 h
Charging time	Ca. 2 h

---

## FUNCTION

### **Switching on:**

Automatic power on and pairing when opening the lid or pressing the L and R (sensor) button for 3 seconds.

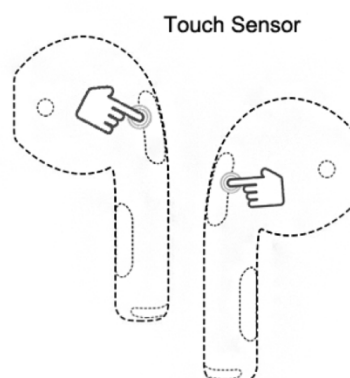

### **Switching off:**

Touch one of the touch sensors for 5 seconds.  
Place it in the charging case and close the lid.

### **Pairing:**

When you open the lid of the charging station, the device automatically turns on and goes into TWS pairing mode.

Then search and select "LEICKE EP18221" in the Bluetooth menu of your phone.

### **Multipoint pairing with multiple devices:**

Pair the headphones with device 1 first, and then turn off the Bluetooth of the device.

 
Now pair with device 2 and then turn on the Bluetooth on device 1 again.

## VOICE ASSISTENT:




1. Press the touch sensor R/L for 2 seconds to call up the Siri/Google Assistant.
2. Voice calling is supported by saying "Hey, Siri!".

## RENAME AND GPS FUNCTION

1. Rename it in the Bluetooth settings.
2. Please search for or download the app "Find My" and install it on your smartphone.

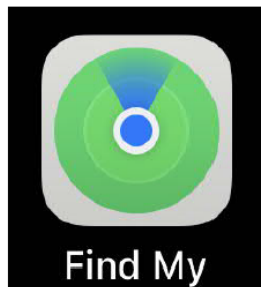

For iOS

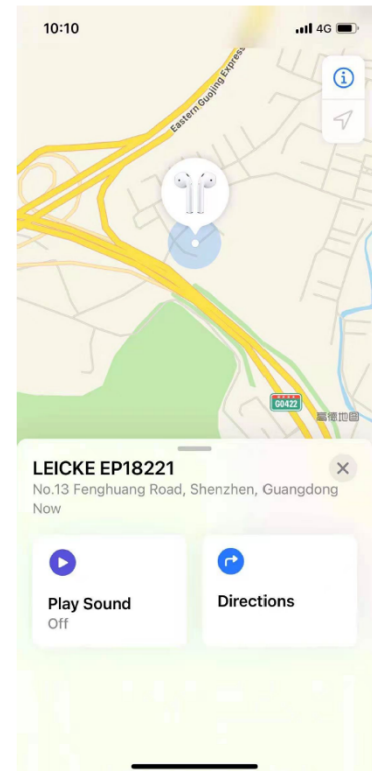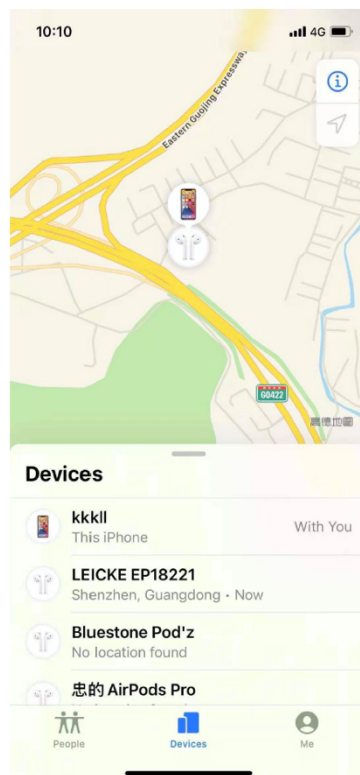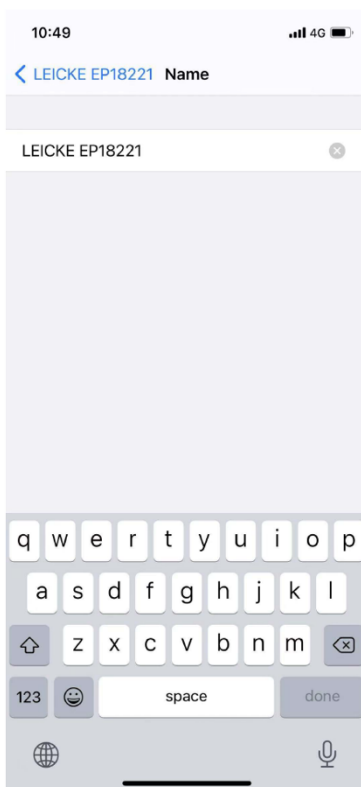   

## INCOMING CALL

- Briefly tap the R/L touch sensor to answer/hang up the call.
- Tap the R/L touch sensor for 3 seconds to reject the call.

---

## ENVIRONMENTAL NOISE CANCELLATION

Automatically switch to ENC mode on incoming call.

## MUSIC CONTROL

- Briefly tap the R/L touch sensor to play or pause music.
- Tap the R/L touch sensor twice to move to the next track.
- Tap the R/L touch sensor three times to go to the previous track

## LOW BATTERY WARNING

When the battery is low, the „ding“ alarm will sound.

 
 
## CHARGING THE HEADSET

Insert the headset into the base and close the lid.

## CHARGING THE BASE

Charge the headset via the iOS cable. Wireless charging is supported.

When the battery is fully charged, the red LED indicator turns constant.

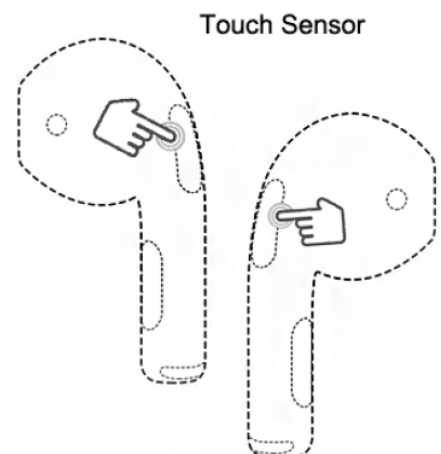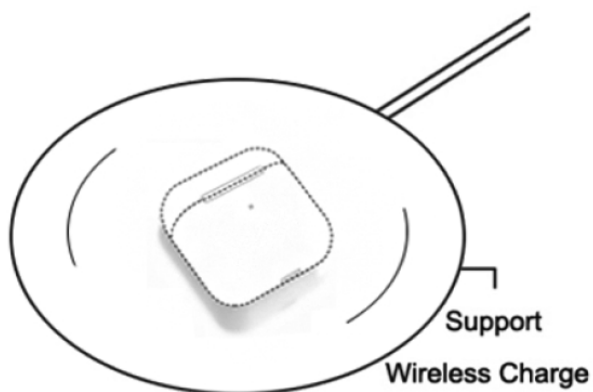

## SAFTY NOTES

For your own safety and for long enjoyment of our product, please follow the following safety instructions:

- Please use device as described in the manual
- Please keep the device dry and use in dry environment only. Do not touch with wet hands
- Keep away from damp, high temperature, dusty, erosive and oxidative environment
- Do not open the headset.

## DISPOSAL

This device contains materials that must not be disposed of as household waste. Please check local laws concerning the applicable disposal regulations. Protect the environment by participating in recycling programs!



## DECLARATION OF CONFORMITY

LEICKE GmbH here with declares that the devices EP18221 comply with the RED 2014/30/EU and ROHS 2011/65/EC & 2015/863 & 2017/2102 regulations. The declaration of conformity can be found at: [www.leicke.com/de/products/EP18221](http://www.leicke.com/de/products/EP18221)



## CONTACT

**If you have any questions, please feel free to contact us**

**LEICKE GmbH**  
Stöhrerstraße 17  
04347 Leipzig  
Germany

**Web: [www.leicke.com](http://www.leicke.com)**  
**Mail: [info@leicke.com](mailto:info@leicke.com)**

