



# Manual

## Bluetooth-Speaker DJ Roxxx "Grand"



Product number: EP18239

## PACKAGE CONTENTS

Congratulations on the purchase of your new device. You have selected a high-quality product. Before attempting to use this device, please check the packaging and make sure the following items are contained in the package:

Number of Pieces	Name	Note
1	Bluetooth-Speaker	integrated battery
1	Adapter	DC 15V 2A
1	AUX cable	3.5mm
1	Remote control	-
1	User's manual	-

## TECHNICAL DETAILS

Frequency	50Hz-20KHz
Power	80W
Speaker	10"X2 + 3"X2
Supported audio format	MP3, WAV files
SD / TF card	up to 32 GB
Sensitivity	80db
Bluetooth version	V5.0
Bluetooth transmission range	≤ 10m
Bluetooth usage current	< 30mA
Bluetooth stand-by current	< 15mA
Bluetooth transmission frequency	2.4GHz-2.480GHz
Bluetooth frequency band	UHF
Bluetooth transmission rate	24Mbps
Max. transmission	2.42 mW
Stand-by usage	Up to 40 h
Charging voltage	DC 15V / 2000mA
Battery capacity	12V 7000mAh

Working temperature	-10~40°C
Max. playtime	Up to 8h
Size, Net Weight	32.5*32.5*85.5cm, 13.3kg

 
## COMPATIBILITY

Compatible with tablets, smartphones, PCs, notebooks which have Bluetooth or AUX output.

## CAUTION

1. Do not expose the device to dripping or splashing liquid.
2. Do not place objects filled with liquid on the unit.
3. Do not block the ventilation openings.
4. When using a high output signal, do not turn the volume up to maximum to avoid distortion.

## FUNCTION PANEL

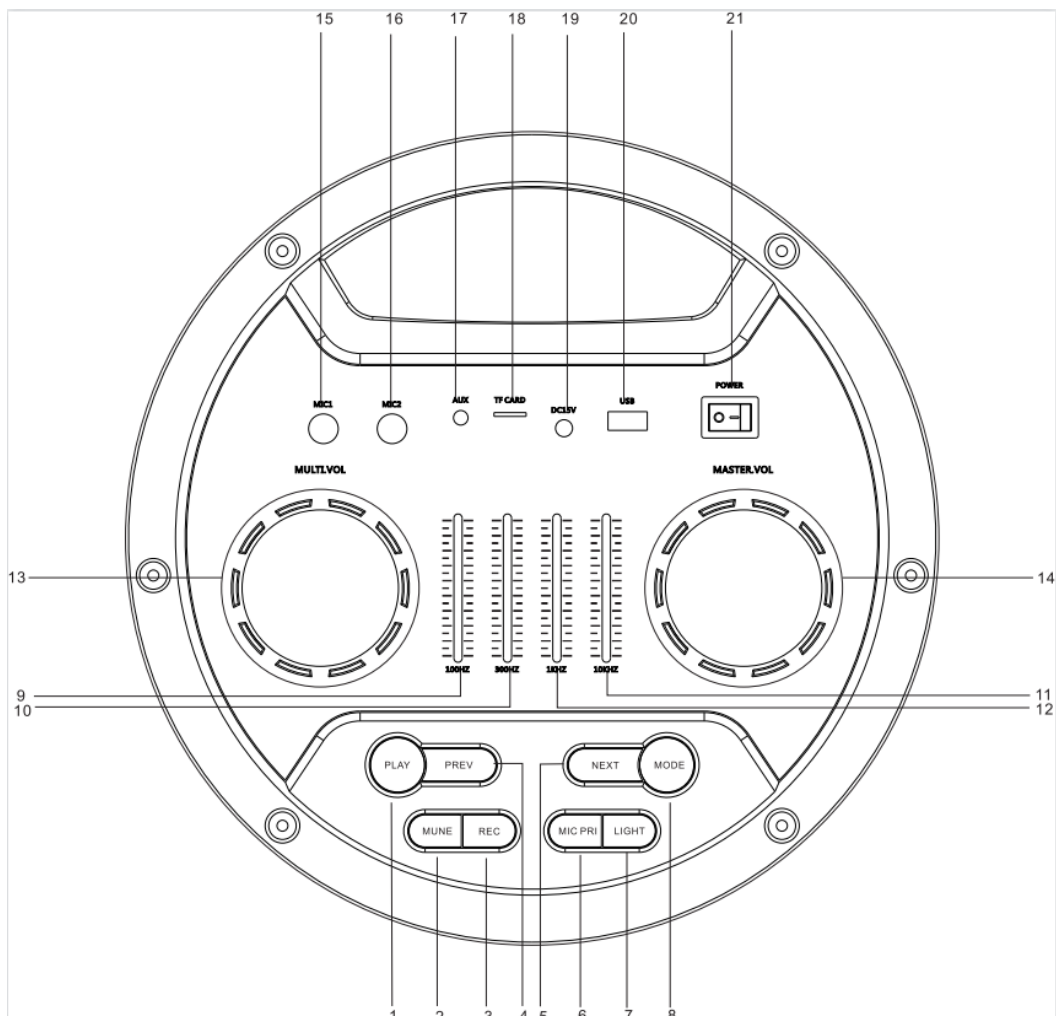

## INTERFACE DESCRIPTION

1	PLAY	7	LIGHT	13	MULTI.VOL	19	DC 15V
2	MENU	8	MODE	14	MASTER.VOL	20	USB Slot
3	REC	9	100HZ	15	MIC 1	21	Power button
4	PREV	10	300HZ	16	MIC2		
5	NEXT	11	10KHZ	17	AUX		
6	MIC PRI	12	1KHZ	18	TF card slot		

## BLUETOOTH MODE

1. Press the "MODE" button to switch to Bluetooth mode.
2. Mobile phone open the Bluetooth and search "EP18239", click on the connection, after connect successful, you can enjoy wonderful music.
3. Long press "MODE" Button for 3 second to disconnect the Bluetooth.

## MUSIC MODE

1. When the TF card or U disk is inserted, the machine automatically switches to music playback mode.
2. Press the PLAY button to pause, press again to continue playing.
3. Press "PREV" or "NEXT" to switch music.
4. Press the MODE key to switch music / USB / TF / AUX / FM / Bluetooth function.

## FM-MODE

1. Press the "MODE" button to switch to FM mode.
2. Long Press "PLAY" button for three second to automatically search for the station. After the station is completed, the station will automatically save it.
3. Press "PREV /NEXT" keys to switch radio stations.
4. Press the "MODE" key to switch other functions.

## MENU MODE

When using microphone, press the "MENU" to switch the MIC VOL/ECHO, and rotate Multi vol to adjust the MIC vol/ Echo.

H 00~H 15 MIC volume ( From 0 to 15)

E 00~E15 ECHO (From 0 to 15)

## Interface Description

1. USB interface-----directly into the U disk to play.
2. TF card interface-----directly insert TF card to play.
3. AUX(Audio input)-----Connect the headphone jack of an external device such as a mobile phone or tablet.
4. MIC1/ MIC2-----access microphone for amplification.
5. Charging interface: for the adapter to charge the machine.

- 
6. MASTER.VOL-----Adjust the volume of the machine.
  7. MULTI.VOL-----Adjust the microphone volume & echo.

### Microphone Operation

1. Turn on the power and insert the microphone into the microphone hole.
2. Prompt or sing into the microphone for amplification.
3. Adjust the machine's reverb knob to achieve the best results.
4. Wireless microphone requires external module and wireless microphone.

### REC Function

Only record the sound source when connect with Microphone, then store in USB or TF card. If USB and TF card both inserted, then USB priority.

Press " REC" to start the recording, press" REC " again to play the recording.


### MIC PRI

 
When connect with MIC, press the “MIC PRI” button, the LED show” ON” to weaken the background sound and enhance the sound from the MIC, press again the LED show “ OFF ” to exit the MIC PRI function.

### Charging

When the battery is charging, the battery indicator on the function panel will show in red, after full charged, it will turn in Green.When the battery is low, the battery icon on the LED screen will keep flashing, please recharge it in time.

### REMOTE INSTRUCTIONS

1. Mute: Press this button to mute the music.
2. MODE: Switch mode to FM/BT.
3. REC: Record music.
4. CH-: Last channel / previous Song
5.  : Repeat a single or all tracks.
6. Digit 0-9: Change the song that was saved on the USB stick/ TF card.
7. REC Play: Play recorded music.
8. VOL+: Turn up the volume.
9. SCAN: Longpress in FM mode to scan the channel. Press briefly to pause the music.
10. CH+: Next channel / Next song.
11. VOL-: Turn down the volume.
12. LED: Press this key to switch the speaker lighting on/off.

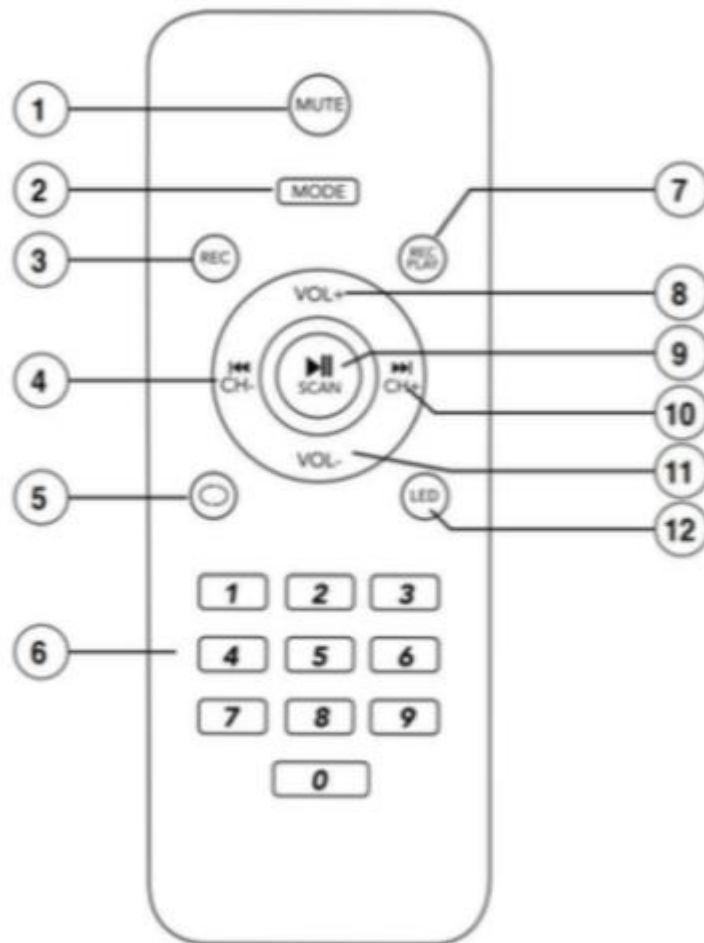

## SAFETY NOTES

For your own safety and so that you can enjoy our product for a long time, please observe the following safety instructions:

- Do not expose this product to a wet environment or high temperatures. It must not stand in the rain or fall.
- To reduce the risk of electronic shock or fire, do not remove the case cover, but consult a qualified electrician.
- In the rare event of a malfunction, do not attempt to repair the unit yourself. Contact a certified service technician for proper diagnosis and repair.
- If fragments or liquids fall into the equipment box, turn off the power immediately. It must not be used again until it has been checked by qualified personnel.
- The device should be placed on a horizontal, flat and solid surface with good ventilation.
- Do not install the unit in or near a place where it may come into contact with rain, moisture or other liquids.
- If the battery is incorrectly replaced, an explosion may occur. Please replace it with a battery of the same or equivalent type.

- To avoid an accidental charging, the original adapter of this product must be used to charge the battery. If the accident or machine damage is caused by other original adapters, the warranty is void.
- To avoid battery explosion, do not install the unit in areas of extreme heat, fire or in areas exposed to direct sunlight.

## DISPOSAL

### Our obligation to inform you according to the battery law

In connection with the sale of batteries or the delivery of devices containing batteries, we are obliged to inform you of the following:

As the end user, you are legally obliged to return used batteries. You can return used batteries that we carry or have carried in our range as new batteries to our dispatch warehouse (dispatch address) free of charge. The symbols shown on the batteries have the following meaning:

The symbol of the crossed-out dustbin means that the battery must not be disposed of in the household waste.

must not be disposed of in the household waste.

Pb = Battery contains more than 0.004% lead by mass.

Cd = battery contains more than 0.002 mass percent cadmium

Hg = Battery contains more than 0.0005% mercury by mass. Please observe the above instructions.



## DECLARATION OF CONFORMITY

LEICKE GmbH herewith declares that the device complies with the RED 2014/53/EU and Rohs 2011/65/EC Annex II 2015/863 regulations. The declaration of conformity can be found at [www.leicke.com](http://www.leicke.com). Go to the product you bought and look at downloads.

[www.leicke.com/de/products/EP18239](http://www.leicke.com/de/products/EP18239)



## CONTACT

**Please contact us in case of questions!**

### PRODUCTION & WHOLESALE

LEICKE GmbH

Stöhrerstraße 17

04347 Leipzig

Germany

Web: [www.leicke.com](http://www.leicke.com)

Mail: [info@leicke.com](mailto:info@leicke.com)

