



**Manual**  
Bluetooth-Speaker DJ Roxxx  
"Partybox Aurora"



Product number: EP18240

## PACKAGE CONTENTS

Congratulations on the purchase of your new device. You have selected a high-quality product. Before attempting to use this device, please check the packaging and make sure the following items are contained in the package:

Number of Pieces	Name	Note
1	Bluetooth-Speaker	integrated battery
1	Adapter	DC 9V 1.5A
1	AUX cable	3.5mm
1	Remote control	-
1	User's manual	-

## TECHNICAL DETAILS

Frequency	50Hz-20KHz
Power	80W
Speaker	6.5"X2 + 1.5"X1
Supported audio format	MP3, WAV files
SD / TF card	up to 32 GB
Sensitivity	80db
Bluetooth version	V5.0
Bluetooth transmission range	≤ 10m
Bluetooth usage current	< 30mA
Bluetooth stand-by current	< 15mA
Bluetooth transmission frequency	2.4GHz-2.480GHz
Bluetooth frequency band	UHF
Bluetooth transmission rate	24Mbps
Max. transmission	2.42 mW
Stand-by usage	Up to 40 h
Charging voltage	DC 9V / 1500mA
Battery capacity	7.4V 10000mAh

Working temperature	-10~40°C
Max. playtime	Up to 8h
Size, Net Weight	24*25*63cm, 6kg


### COMPATIBILITY

Compatible with tablets, smartphones, PCs, notebooks which have Bluetooth or AUX output.




### CAUTION

1. Do not expose the device to dripping or splashing liquid.
2. Do not place objects filled with liquid on the unit.
3. Do not block the ventilation openings.
4. When using a high output signal, do not turn the volume up to maximum to avoid distortion.
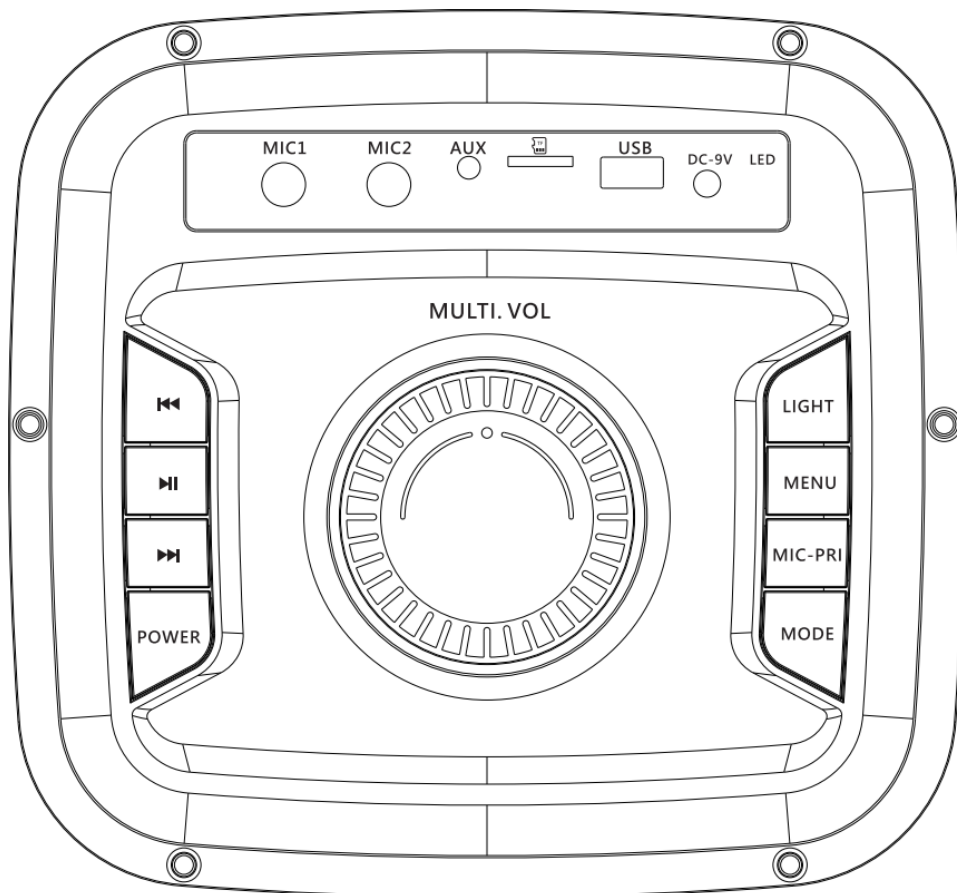
### FUNCTION PANEL




## INTERFACE DESCRIPTION

1	<b>POWER</b>	ON/OFF the power of the Whole product.
2	<b>MODE</b>	Switch USB/AUX//FM/TF/BT. (when BT connected, press"Mode" button for 3 seconds to disconnect the BT.and re-enter the matching state for another phone).
3	<b>MIC-PRI</b>	Press the button, the display show" on" machine come into microphone priority status, and press again "MIC PRI" the display show" off, microphone priority closed.
4	<b>MENU</b>	When using microphone, press the “ MENU ” to switch the MIC /ECHO VOL, and rotate Multi vol to adjust the MIC / Echo vol. H 00~H 30 MIC VOL ( From 0 to 30) E 00~E 30 ECHO VOL (From 0 to 30)
5	<b>LIGHT</b>	Transfer different light mode.
6		Short press is the previous song or radio station.
7		Press the play button to pause and continue playing.
8		Short press is the next song or radio station.
9	<b>MULTI. VOL</b>	Adjust the volume of the machine.
10	<b>MIC 1/2</b>	microphone jack
11	<b>AUX</b>	Connect the smart device( mobile phone / tablet) with the machine by an AUX-IN cable.
12	<b>TF interface</b>	directly insert TF card to play.
13	<b>USB interface</b>	Insert the USB disk into the USB mode.
14	<b>DC-9V</b>	For the 9V/1.5A adapter to charge the machine.
15	<b>LED</b>	When Charging, it shows in red, and once full charge, the light will turn into green.

## BLUETOOTH MODE

1. Press the MODE button to switch to Bluetooth mode.
2. Mobile phone open the Bluetooth and search"EP18240", click on the connection, after connect successful, you can enjoy wonderful music.

## MUSIC MODE

1. When the TF card or U disk is inserted, the machine automatically switches to music playback mode.
2. Press the pause/Play button  to pause, press again to continue playing.
3. Press Music Last song/Next Song to switch music.
4. Press the MODE key to switch music / USB / TF / AUX /FM/ Bluetooth function.

## FM-MODE

1. press the MODE button to switch to FM model.
2. Long Press play button to automatically search for the station. After the station is completed, the station will automatically save it.
3. Press Last song/Next Song keys to switch radio stations.
4. Press the MODE key to switch other functions.

## REC Function ( Control by remote)

You can record the sound source when you connect a microphone. It is possible to store the recordings on USB KEY or a TF card. If both a USB and TF card are inserted, then USB will be priority.

- Press the REC button on the remote to start recording.
- Press the REC play button to play your recording

## Microphone operation

1. Turn on the power and insert the microphone into the microphone hole.
2. Prompt into the microphone for amplification.
3. Wireless microphone requires external module and wireless microphone.


## Charging


When the battery is charging, the battery indicator show in red, after full charge the indicator show in Green. When in low battery, the battery icons on the LED screen will keep flashing, please charge in time.

## TWS Function

Under Bluetooth Mode, long press the “ PLAY/PAUSE ’ button for three seconds on either speaker, it will start TWS auto pairing, With a “DUDU” Sound indicate successfully paired. Open the Bluetooth of the Phone and search the Bluetooth pairing name, after paired successfully, one speaker will become left channel, and other become right channel. Long press the “ mode ” Button to auto shutdown.

## REMOTE INSTRUCTIONS

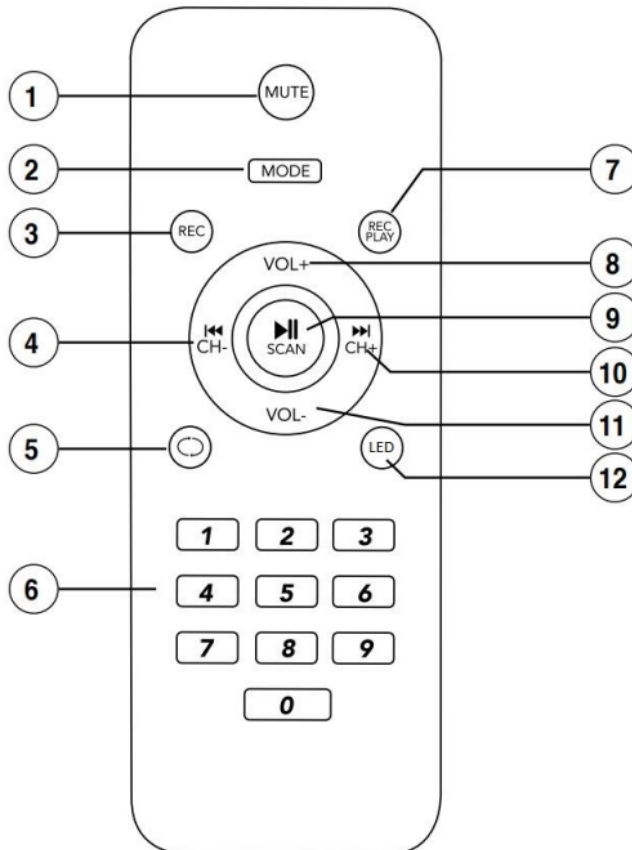

- 
1. Mute: Press this button to mute the music.
  2. MODE: Switch mode to FM/BT.
  3. REC: Record your Voice from the Microphone.
  4. CH-: Last channel / previous Song
  5.  : Repeat a single or all tracks.
  6. Digit 0-9: Change the song that was saved on the USB stick/ TF card.
  7. REC Play: Play your recorded Voice.
  8. VOL+: Turn up the volume.
  9. SCAN: Longpress in FM mode to scan the channel. Press briefly to pause the music.
  10. CH+: Next channel / Next song.
  11. VOL-: Turn down the volume.
  12. LED: Press this key to switch the speaker lighting on/off.

## SAFETY NOTES

For your own safety and so that you can enjoy our product for a long time, please observe the following safety instructions:

- Do not expose this product to a wet environment or high temperatures. It must not stand in the rain or fall.
- To reduce the risk of electronic shock or fire, do not remove the case cover, but consult a qualified electrician.
- In the rare event of a malfunction, do not attempt to repair the unit yourself. Contact a certified service technician for proper diagnosis and repair.
- If fragments or liquids fall into the equipment box, turn off the power immediately. It must not be used again until it has been checked by qualified personnel.
- The device should be placed on a horizontal, flat and solid surface with good ventilation.
- Do not install the unit in or near a place where it may come into contact with rain, moisture or other liquids.
- If the battery is incorrectly replaced, an explosion may occur. Please replace it with a battery of the same or equivalent type.
- To avoid an accidental charging, the original adapter of this product must be used to charge the battery. If the accident or machine damage is caused by other original adapters, the warranty is void.
- To avoid battery explosion, do not install the unit in areas of extreme heat, fire or in areas exposed to direct sunlight.

## DISPOSAL

### **Our obligation to inform you according to the battery law**

In connection with the sale of batteries or the delivery of devices containing batteries, we are obliged to inform you of the following:

As the end user, you are legally obliged to return used batteries. You can return used batteries that we carry or have carried in our range as new batteries to our dispatch warehouse (dispatch address) free of charge. The symbols shown on the batteries have the following meaning:

The symbol of the crossed-out dustbin means that the battery must not be disposed of in the household waste.

must not be disposed of in the household waste.

Pb = Battery contains more than 0.004% lead by mass.

Cd = battery contains more than 0.002 mass percent cadmium

Hg = Battery contains more than 0.0005% mercury by mass. Please observe the above instructions.



## DECLARATION OF CONFORMITY

LEICKE GmbH herewith declares that the device complies with the RED 2014/53/EU and Rohs 2011/65/EC Annex II 2015/863 & 2017/2102 regulations. The declaration of conformity can be found at [www.leicke.com](http://www.leicke.com). Go to the product you bought and look at downloads. [www.leicke.com/de/products/EP18240](http://www.leicke.com/de/products/EP18240)



## Contact

**Please contact us in case of questions!**

### **PRODUCTION & WHOLESALE**

LEICKE GmbH

Stöhrerstraße 17

04347 Leipzig

Germany

Web: [www.leicke.com](http://www.leicke.com)

Mail: [info@leicke.com](mailto:info@leicke.com)