

Manual

LEICKE Bluetooth Speaker DJ Roxxx Shower II



Product number: EP19030

PACKAGE CONTENTS

Congratulations on the purchase of your new device, you have selected a high-quality product. Before attempting to use this device, please check the packaging and make sure the following items are contained in the package:

Number of Pieces	Name	Note
1	Bluetooth Speaker	Integrated Battery
1	USB-C Charging Cable	-
1	User's Manual	-

TECHNICAL DETAILS

Frequency response	100Hz-20KHz
Rated power	5W
Sensitivity	83dB±2dB
Bluetooth-Version	5.3
Bluetooth signal range	≤15m
Bluetooth usage current	< 30mA
Bluetooth stand-by current	< 15mA
Bluetooth transmission frequency	2.4GHz-2.480GHz
Bluetooth frequency band	UHF
Max. transmission	2.51 mW
Integrated battery	600mAh
Charging voltage	DC 5V / 1A
Protection class	IP45
Working temperature	-10~40°C
Size	Φ 10cm
Weight	183g

! Note:

- Please charge the battery before using the product the first time for about 3 hours to ensure a maximum life span.
- Only use the original charger.
- The device is compatible with iPhones, tablets, smartphones, PCs, game consoles and many more devices that have Bluetooth output.

BUTTONS AND OPERATION



On/Off button	Long press: Switch on/off
Pause button	Single press: Pause/Play Long press: Disconnect/Reconnect Bluetooth
"Previous" button	Long press: Volume down Single press: Previous song
"Next" button	Long press: Volume up Single press: Next song
Telephone/LED switching button	Single press: switch LED flashing mode, pick up and hang up calls while talking Double press: Call back the last call

BLUETOOTH PAIRING

Step 1: Switch on the speaker.

Step 2: Go to your phone's settings and activate the Bluetooth option.
In the list of found devices you should now find „LEICKE EP19030“. Connect your device.

Step 3: The speaker is now connected. The pairing will be saved for future usage.

Step 4: Choose the music via the source device. Adjusting the volume and switching between songs can then also be done directly at the speaker. (see "**BUTTONS AND OPERATION**")

CHARGING THE INTEGRATED BATTERY

Please plug one end of the charging cable into the USB-C charging port of your speaker. The other end plugs into your 5V, 1A (or >1A) charger.

Note: Please switch off the speaker when charging to ensure optimal charging.

The LED will light up red when the power is off and the device is charging. It stops lighting up when charging is complete.

When you are not using the speakers, please switch them off to ensure maximum battery life.

SAFETY NOTES

For your own safety and for long enjoyment of our product, please follow the following safety instructions:

- Please use device as described in the manual.
- To protect your hearing and extend the life of your speakers, the maximum volume should not be adjusted for longer periods of time.
- Use 5V /1A(or >1A) power supplies.
- The speaker is dust and splash resistant, keep it away from deep water.
- Keep away from damp, high temperature, dusty, erosive and oxidative environment.
- Keep the device safe from being hit or falling down.
- Turn off power when device is not in use for a longer time.
- Do not open the cover and do not touch the inner parts. Repairs should only be done by qualified personnel!

MAINTENANCE AND STORAGE

We recommend fully discharging and recharging the speaker every three months. Only store the battery when it is fully charged and recharge it from time to time during longer periods of storage.

Ensure that the speaker is stored in a dry and frost-free place. The ambient temperature should not exceed 40°C and should not fall below -20°C.

DISPOSAL

This device contains materials that must not be disposed of as household waste. Please check local laws concerning the applicable disposal regulations. Protect the environment by participating in recycling programs!



DECLARATION OF CONFORMITY

LEICKE GmbH declares that the device EP19030 complies with the RED 2014/53/EU and RoHS 2011/65/EU & 2015/863 & 2017/2102 regulations. The declaration of conformity can be found at www.leicke.com. Go to the product you bought and look at downloads.



CONTACT

PRODUCTION & WHOLESALE

LEICKE GmbH
Stöhrerstraße 17
04347 Leipzig
Germany

Web: www.leicke.com

Mail: info@leicke.com

If you have any questions, please feel free to contact us.

