



## 114449 | SYS-PRO WEISSDYNAMISCHER 4 ZONEN EINBAU-TOUCH-FERNBEDIENUNG, WEISS, 230V

## 114450 | SYS-PRO WEISSDYNAMISCHER 4 ZONEN EINBAU-TOUCH-FERNBEDIENUNG, SCHWARZ, 230V

### Touch Panel work as RF remote (two match ways)

End user can choose the suitable match/delete ways. Two options are offered for selection:

#### Use the controller's Match key

Match:

Short press match key, immediately press Zone key of the touch panel.

Delete:

Press and hold match key for 5s to delete all match, The light blinks 5 times means all matched remotes were deleted.

#### Use Power Restart


Match:

Switch off the power of the receiver, then switch on power again, immediately short press Zone key 3 times on the touch panel. The light blinks 3 times means match is successful.

Delete:

Switch off the power of the receiver, then switch on power again, immediately short press Zone key 5 times on the touch panel. The light blinks 5 times means all matched remotes were deleted.

### Wiring Diagram for touch panel work as RF remote

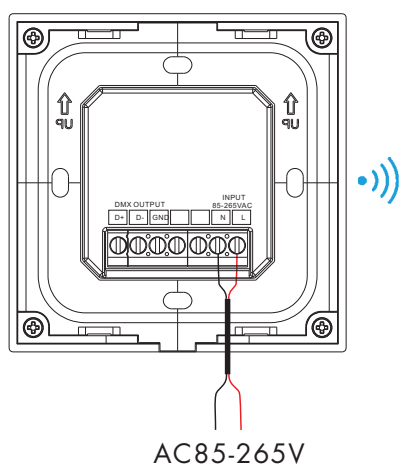

### Malfunctions analysis & troubleshooting

Malfunctions	Causes	Troubleshooting
No light	1. No power. 2. Wrong connection or insecure.	1. Check the power. 2. Check the connection.
Wrong color	1. DMX decoder first address error. 2. Wrong connection of output wires.	1. Check the DMX first address. 2. Reconnect output wires.