




LOKLIK

Product Manual of LOKLIK Easy Heat Press

Thank you for purchasing the LOKLIK Easy Heat Press machine. Before using this product for the first time, please read this product manual carefully and keep it for future reference.

Start it right now!

Let's get you more understanding about the LOKLIK Easy Heat Press machine!

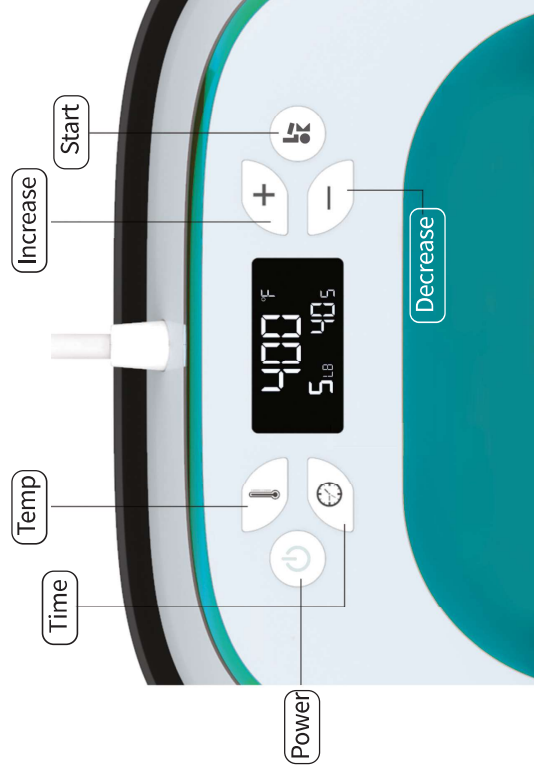

Do not touch the heating area while in use to avoid burns.
(Box Including: Thermal insulation base and heating plate.)

Digital Display Screen:
Temperature: 210-410°F (100°C~210°C)
Time: 1-600s
Pressure Display: 110lb (50kg)

Simple Operation Easy Settings

Press the "Power" key, set your ideal temperature and time with the "Temp" and "Time" key, and adjust them with the "+" or "-" key. When reaching the set temperature, press the "Start" key to start counting down. Press the machine on the project and put it back on the safety base when finished.

Instructions for use

1. After the product is powered, the "Switch" key lights. Press the "Switch" key to start setting temp and time. After setting, press "Start" to start heating. The "Start" key will feature a long green light and beeps when

reaching the set temperature.

2. "Temp" key: Press to set the temperature.

Short press(Press once): set temperature and adjust the temperature with the "+" or "-" button.

Long press(Press for 2s): switch the temperature between Fahrenheit and Celsius.

Press "Temp" again to exit the temperature setting mode, or wait for 3s with no operation.

3. "Time" key: Press to set the time.

Short press(Press once): set time and adjust the time with the "+" or "-" button.

Long press(Press for 2s): switch the pressure between LB and KG.

Press "Time" again to exit the time setting mode, or wait for 3s with no operation.

4. "+" key: Press to increase temperature or time values.

5. "-" key: Press to decrease temperature or time values.

6. "Start" key: Press the "Start" key to count down and start heating.

Step-by-step details



1. Turn on the heat press, and set the required temperature and time to heat up.



2. After reaching the set temperature, place the clothes on the insulation pad, and put the weeded vinyl pattern and Teflon sheet on the clothes.



3. Place the heat press on the Teflon sheet and press the "Start" key to count down. Apply pressure to the machine.



4. When the time is up and the timer beeps, remove the heat press and place it back on the safety base, and cold peel the protective film to enjoy the finished project.

Two ways to apply pressure:

Light pressure by one-handed or by the machine itself.

Medium and heavy pressure by two-handed

Pressure specifications table:

Low pressure: 6-11 pounds (2.72-5kg) .Medium pressure:11-33 pounds (5-15kg) .

Heavy pressure: 33-50 pounds (15-22.68kg).

Specifications

Materials	Objects	Settings	Note
PU HTV	Cotton, Polyester, etc	Temp: 145-155°C (293-311°F) Time: 15s	Pressure: 45-60lb (20.5-27kg) Cold/Warm Peel
PVC HTV	Cotton, Polyester, etc	Temp: 145-155°C (293-311°F) Time: 15s	Pressure: 45-60lb (20.5-27kg) Cold/Warm Peel
Glitter HTV	Cotton, Polyester, etc	Temp: 150-160°C (302-320°F) Time: 15s	Pressure: 45-60lb (20.5-27kg) Cold/Warm Peel
Sublimation Paper	Polyester, Cotton≤30%, etc	Temp: 180-200°C (356-392°F) Time: 35-45s	Pressure: 45-60lb (20.5-27kg) Cold Peel
Heat Transfer Paper (Dark Fabric)	100% Cotton	Temp: 155-165°C (311-329°F) Time: 15s	Pressure: 60lb (27kg)
Heat Transfer Paper (Light Fabric)	100% Cotton	Temp: 155-165°C (311-329°F) Time: 15s	Pressure: 45-60lb (20.5-27kg)

Usage Notes:

1. To prevent leakage and other accidents, please use this machine according to the product manual, and do not use it for other purposes.

2. Please check the correct supply voltage 220-240V before use.

3. Please check the power cord regularly to prevent accidents. If the power cord is damaged, it must be replaced by the manufacturer or professionals from a qualified service agency.

4. Please hold the plug firmly when unplugging the product. Do not pull the power cord directly.

5. This product has to be working on a stable and flat surface. Pay attention to the safety of its surrounding environment while in use.

6. Do not use this product in a humid environment.

7. Do not use this product outdoors. It's only for household use.

8. When the heat press is left vacant at high temperature for a long time, it may cause the pressure display error, please press and hold the "start" button to reset the pressure, then it can be used normally.

Precautions:

- 1.This product should be kept away from children, animals, and plants while in use.
- 2.This machine is a heating functional product. After use, please wait until it's been completely cooled down before checking and storing it to avoid burns.
- 3.The heating plate and the thermal insulation base have high temperatures during use. Please do not touch them directly with your hands to prevent burns.
- 4.Do not immerse the product, power cord, and power plug in water. Do not wash the product with any liquid.
- 5.Do not let the power cord touch the heating plate during the operation.
- 6.When putting this product in use, please watch it out carefully to avoid accidents.
- 7.This product is not suitable for people with poor physical fitness, slow response, mental disorders, or lack of relevant experience and common sense (including children). Or it must be used safely under the guidance or assistance of their safety guardians or professionals.

Notice:

In order to prevent the leakage of electricity and other dangers happening with this product, the power supply must be shut down after use or before cleaning the machine. If the machine or power cord is damaged, please stop using this product immediately. Please contact our company's maintenance center and do not disassemble and repair it by yourself.

LOKLIK Easy Heat Press Machine Limited Warranty

The warranty period of this machine is one year from the date of purchase. Other LOKLIK accessories are guaranteed for free within three months from the date of purchase. Warranty service is available when there's a malfunction in normal use during the warranty period. If consumers need warranty service, they need to provide proof of purchase. To the extent permitted by applicable laws, LOKLIK is not responsible for the warranty in the following situations: malfunctions caused by improper use, maintenance, and storage by consumers; malfunctions caused by self-repair or dismantling by those who do not undertake the three-guarantee repair without the permission of our company; products that can continue to be used after repair when the warranty expired; damage caused by force majeure. Meanwhile, LOKLIK disclaims all implied and legal warranties, including warranties of merchantability and fitness for a particular purpose. The warranties that are allowed to be denied are for the duration of this warranty.

Proof of warranty purchase may be required to verify warranty eligibility.

Danger:

1. Do not immerse the LOKLIK Easy Heat Press machine in water.
2. Do not touch high-temperature heating parts: the heating plate and the Thermal insulation base.
3. After use, please wait until it's been completely cooled down before checking and storing it to avoid burns.

CLEANING AND MAINTENANCE:

Before performing cleaning and maintenance, ensure that the power supply has been turned off, unplug the power cord, and wait for the body to completely cool before performing cleaning and maintenance.

Do not put the appliance into water. Please use a soft dry cloth to dry the body without using special cleaning agents to clean it.

When the product is not in use, please clean it and place it in a clean and ventilated place, and store it out of the reach of children.

To reduce the risk of electric shock, this product has a polarized plug (one blade is wider than the other). This plug is intended to fit in a polarized outlet only one way. When the plug does not fit fully in the outlet, reverse the plug. When it still does not fit, contact a qualified electrician to install the proper outlet. Do not change the plug in any way.

Close supervision is required when this product is used near children.

HOUSEHOLD USE ONLY.

DO NOT IMMERGE IN WATER.

When the appliance provided with a power-supply cord that is less than 4-1/2 feet (1.4 m) long shall be provided with instructions that include the following information:

a) A short power-supply cord (or short detachable power-supply cord) is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord.

b) Extension cords (or longer detachable power-supply cords) are available and are not prohibited from being used when care is exercised in their use.

c) When an extension cord is used.

1) The marked electrical rating of the detachable power-supply cord or extension cord shall be no less than the marked electrical rating of the product;

2) The longer cord shall be arranged so that it does not drape over the counter-top or tabletop where it is capable of being tripped over, snagged, or pulled on unintentionally, especially by children.

Input Voltage: AC 220-240V 50/60Hz Power Consumption: 1100-1300W Size: 298mm*298mm*131mm/ 12*12*5in
