

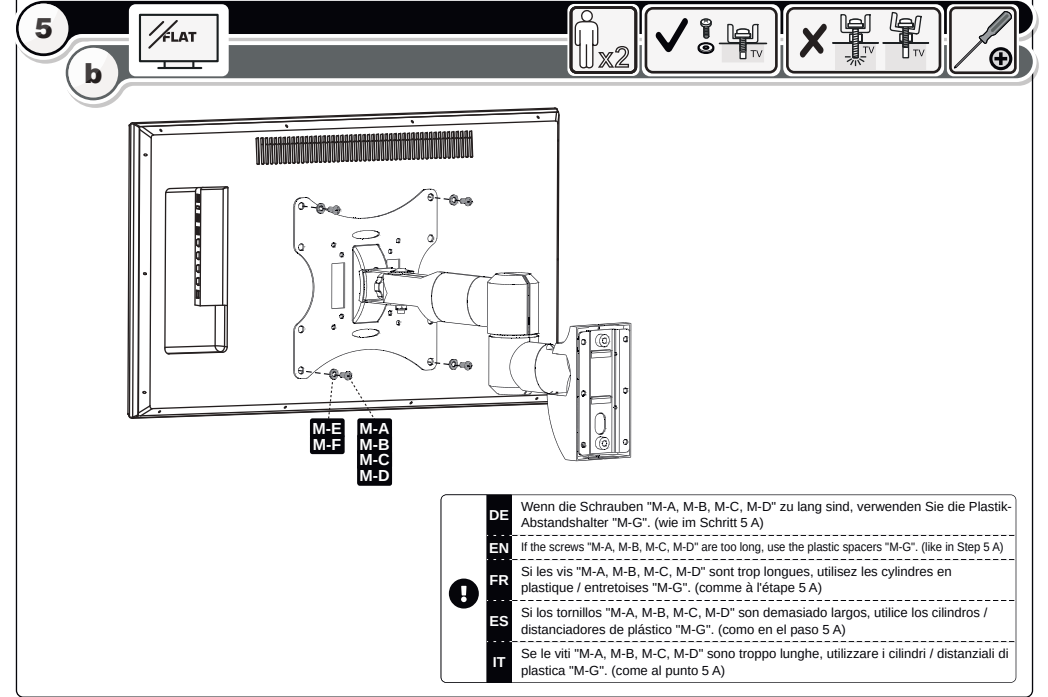
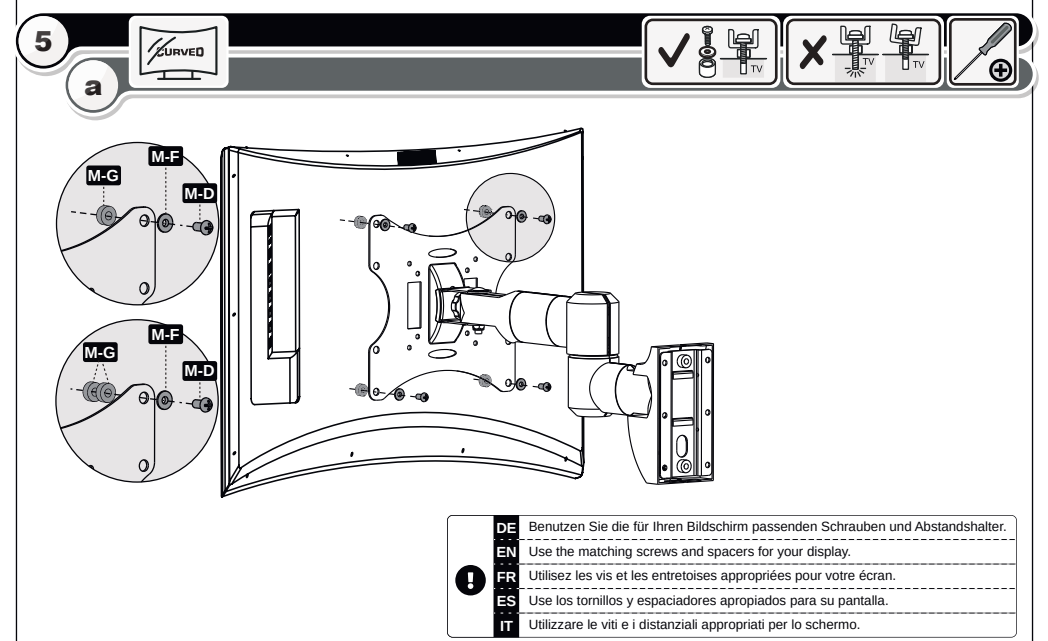
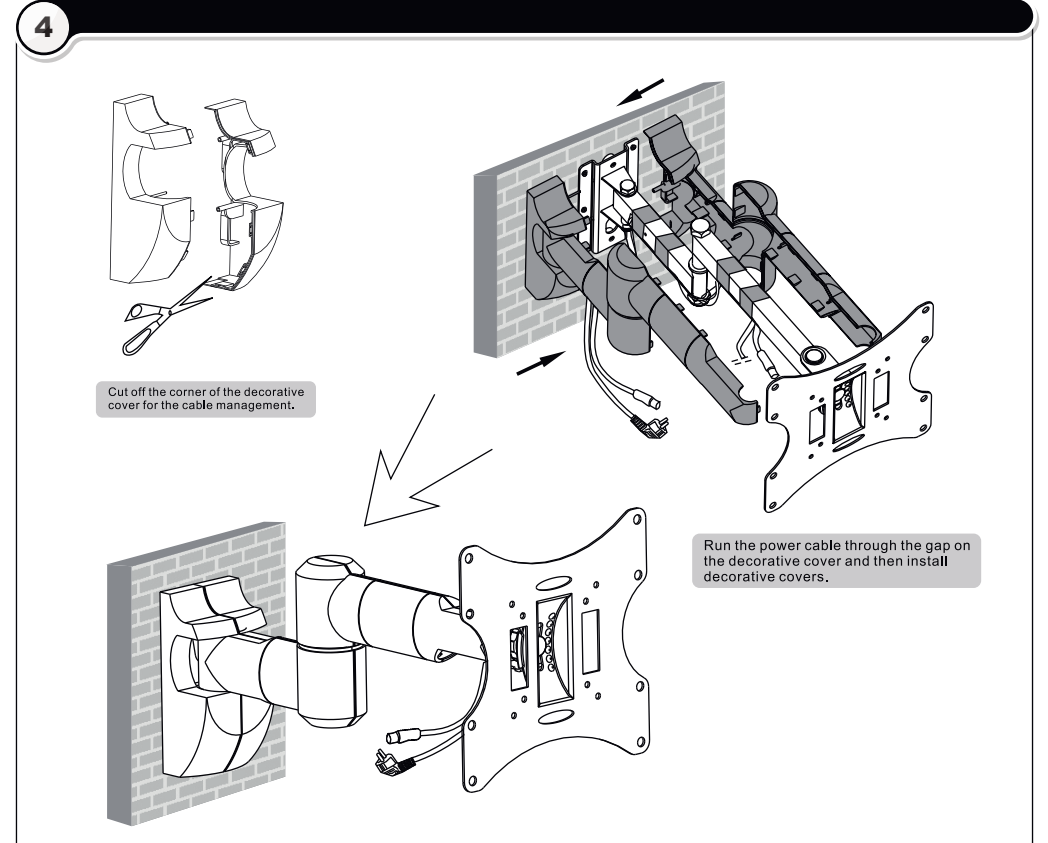


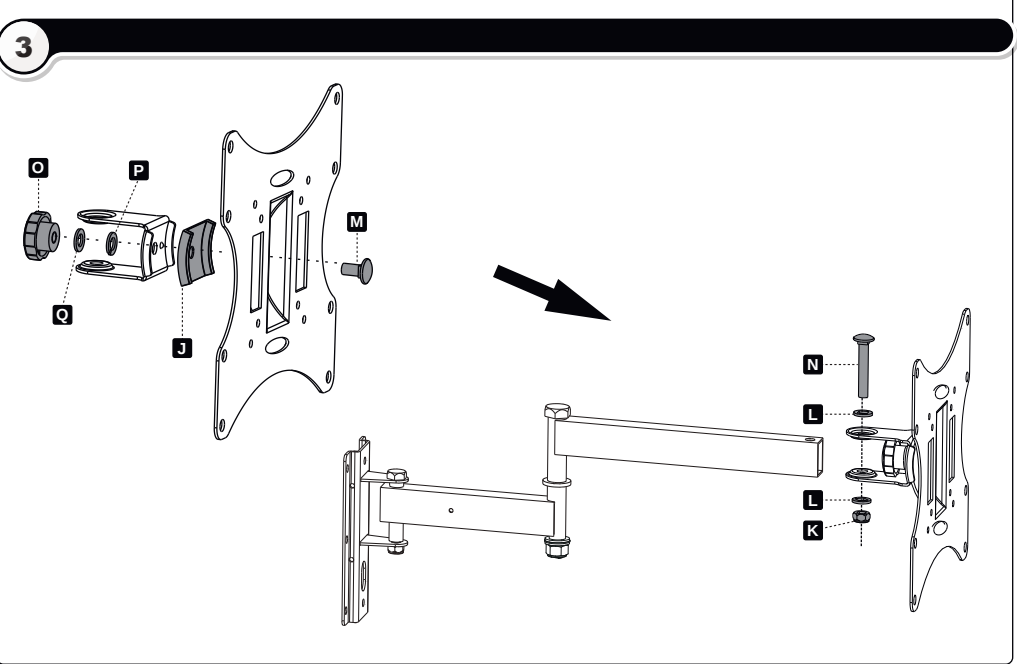

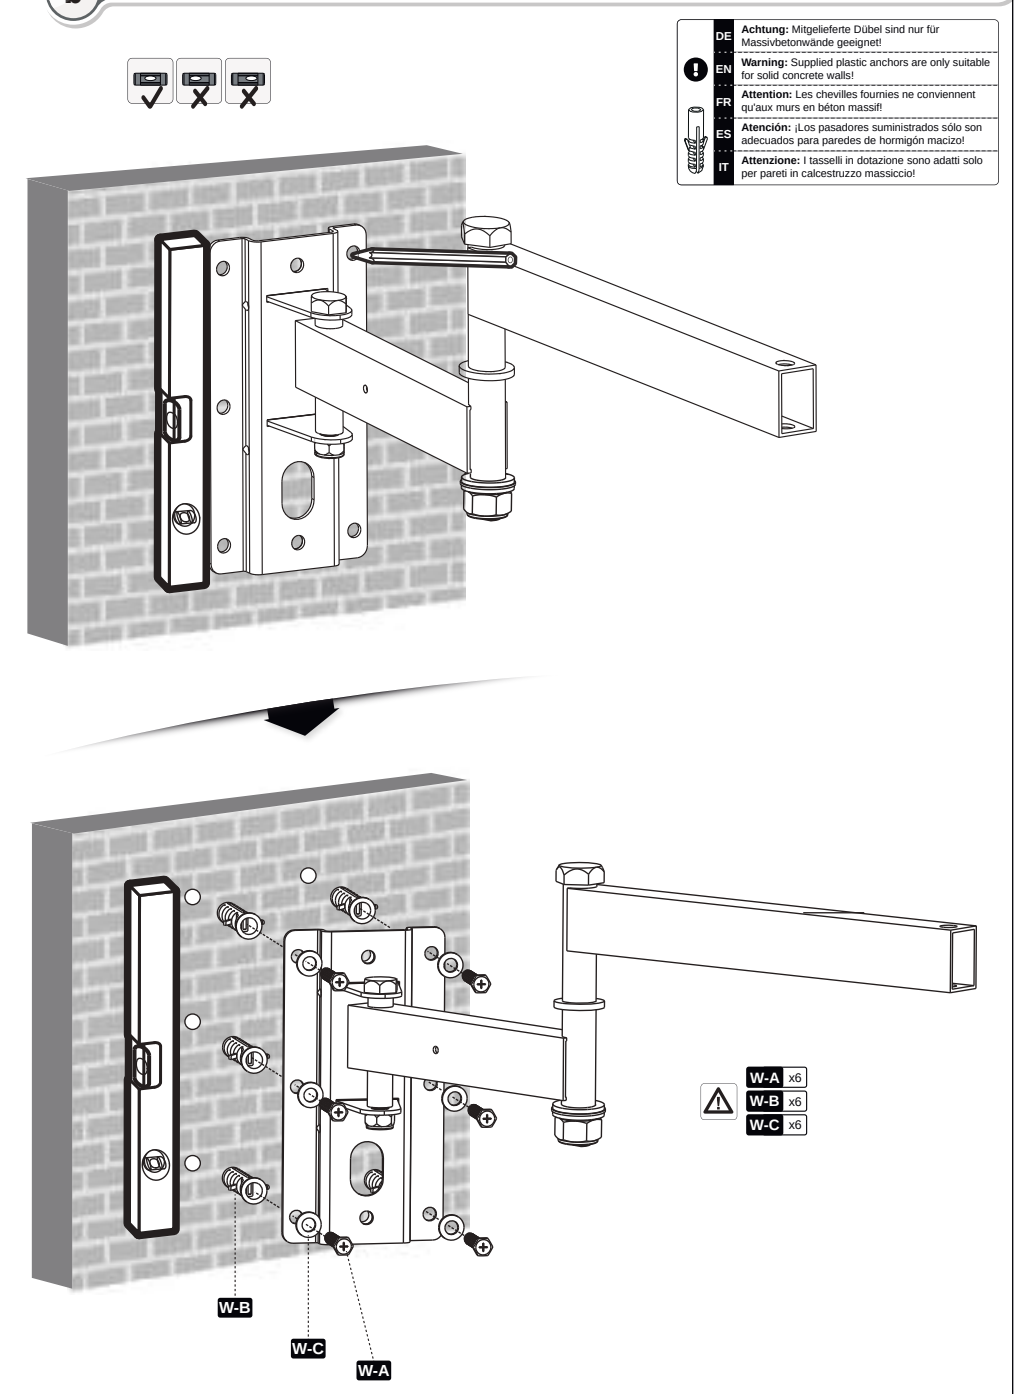

M-E

M-F

M-A

M-B

M-C

M-D

DE

EN

FR

ES

IT

!




Wenn die Schrauben "M-A, M-B, M-C, M-D" zu lang sind, verwenden Sie die Plastik-Abstandshalter "M-G". (wie im Schritt 5 A)

If the screws "M-A, M-B, M-C, M-D" are too long, use the plastic spacers "M-G". (like in Step 5 A)

Si les vis "M-A, M-B, M-C, M-D" sont trop longues, utilisez les cylindres en plastique / entretoises "M-G". (comme à l'étape 5 A)

Si los tornillos "M-A, M-B, M-C, M-D" son demasiado largos, utilice los cilindros / distanciadores de plástico "M-G". (como en el paso 5 A)

Se le viti "M-A, M-B, M-C, M-D" sono troppo lunghe, utilizzare i cilindri / distanziali di plastica "M-G". (come al punto 5 A)

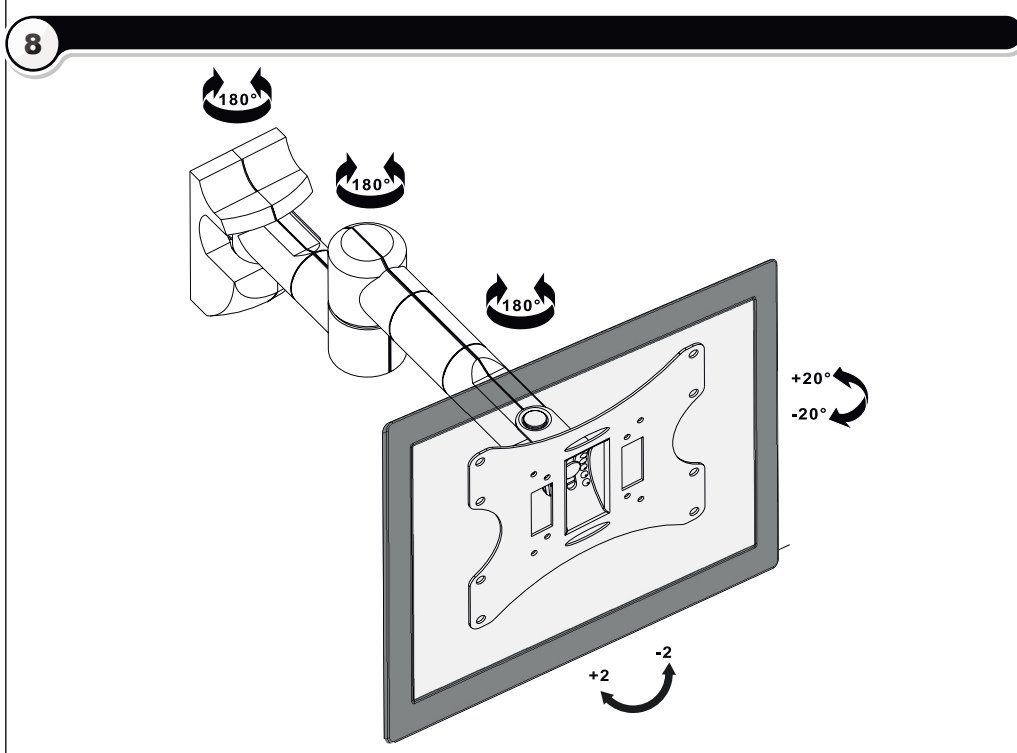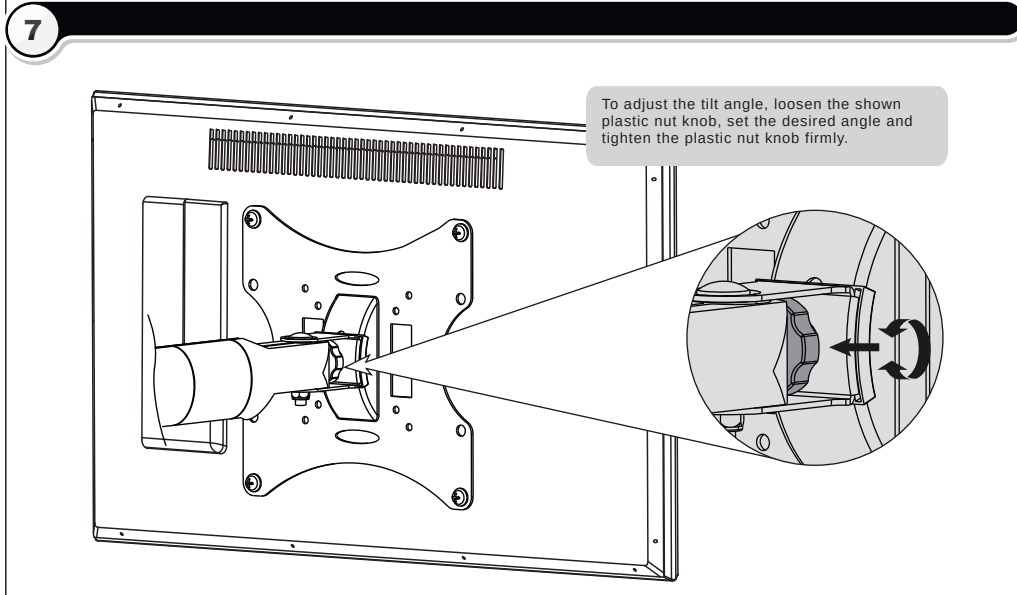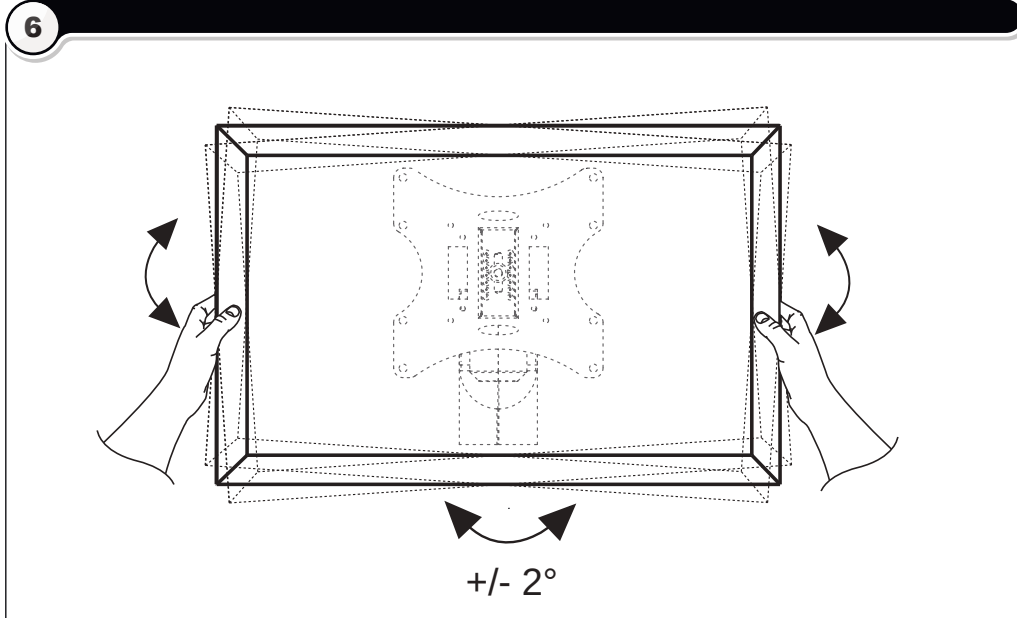

ENZ

ENGINEERING GmbH

E.N.Z. Engineering GmbH

Salzmatten 6

79341 Kenzingen (Germany)

Tel: +49 (0) 7644-565310

Fax: +49 (0) 7644-5653199

E-Mail: support @ ricoo.eu

www.ricoo.eu