

User Guide

Pure O2 UV Disinfection Air Purifier



Productnumber: LE59027

PACKAGE CONTENT


Congratulations on the purchase of your new device. Before using the device, please make sure that the following items are included in the package:

Quantity	Accessories	Note
1	Air Purifier	-
1	Instruction manual	-
1	Infrared remote control	

TECHNICAL SPECIFICATIONS

Voltage	220 V
Power	40W
CADR	180 m ³ /h
Anion concentration	8 Mio
Usable area	60 – 80 m ²
Working Humidity	Less than 85 %
Warranty	2 Jahr
Filter	PP-Vorfilter+HEPA 13+Kohlefilter*Anionenfilter
Electric motor	Copper
Material	ABS
Machine	330x200x515mm
Netweight	4,2 kg
Totalweight	5,5 kg

Details

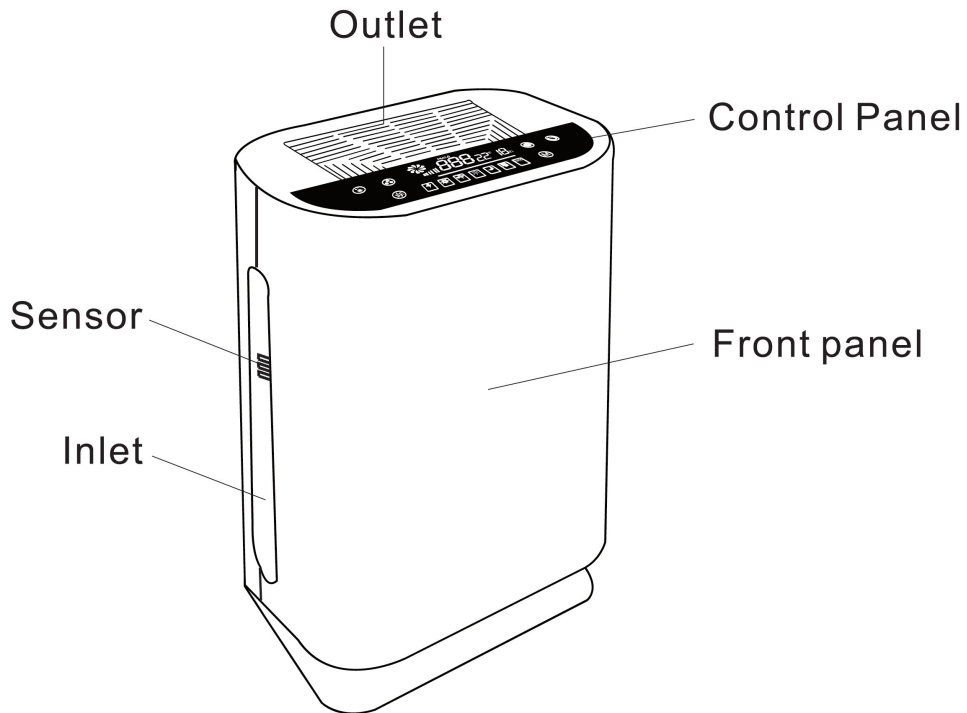

INSTRUCTION FOR THE CONTROL PANEL OF THE AIR PURIFIER

Button	Function
ON/OFF	On an off switch The symbol flashes after the power cord is plugged in.
Timer	Activating the sleep mode. Selectable are 1-12 hours .
Mode	To switch work mode: Auto-Sleep-Manual Auto mode: Fan speed varies depending on air quality. Sleep mode: The light of display screen turns off except "Sleep".
Speed	Regulate speed 3 steps
Anion	On and off switch for the Anion function
UV Sterilize	On and off switch for UV Lampe

Notes:

Air quality display

The light flashes after the air purifier is turned on, which means that the sensor is heating up.

Green: Good

Orange: Normal

Red: Poor


Time needed for one air cleaning cycle depending on room size.

Small size up to 20 m² need 15 min

Ideal size up to 40 m² need 30 min

Maximum size up to 80 m² need 60 min


Notes on operating the infrared remote control

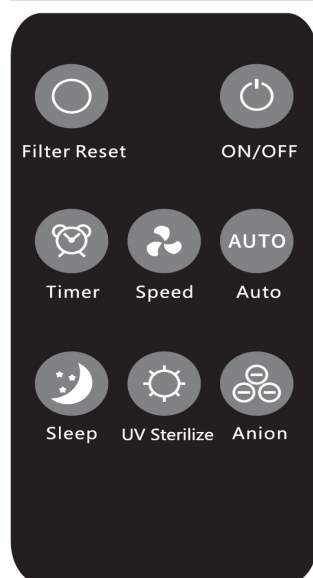

Signals can only be received in one direction.

Please aim at the screen when using it.

The air purifier calculates the filter life according to the operating condition. The indicator lights up when the filter needs to be replaced. After replacing the old filter with a new one, press the "Filter Reset" button on the remote control to reset the filter life calculation.

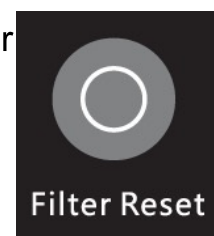

INSTALL FILTER

Turn off the air purifier and unplug the power cord from the wall outlet before installing the filter.

1. Remove the front panel.
2. Remove the filter from the packaging bag.
3. Replace front panel.

CARE INSTRUCTION

The filter is not washable.

The service life depends on the operating hours, air quality and location of the air purifier. Normally, the filter should be changed every 8-12 months.

Clean the filter with a vacuum cleaner or hair dryer (cold air) 1 to 2 months after use. After cleaning, let the filter dry in the sun for about 3 hours to get the best cleaning effect.

SAFETY NOTES

Turn off the air purifier and unplug the power cord before replacing and cleaning the filter.

Do not clean the filter with chemical solvents or strong cleaning agents.

Turn off the air purifier and unplug the power cord before moving the air purifier.

Keep the inlet 20 cm or more away from the wall or other objects.

Check the power cord regularly. If the surface is damaged, discontinue use and contact us..

Only insert the plug into sockets with an AC voltage designed for this purpose.

Do not pull on the power cord.

Air purifier emits unusual sounds, odors or heat.

Do not insert fingers or foreign objects into the inlet or outlet.

Do not place heavy objects on the air purifier.

Protect the air purifier from dust, moisture and humidity, heat sources and direct sunlight.

TROUBLESHOOTING

Error	Check
Not working	Check if power cord connected well with socket.
The air quality indicator is always red	Sensor may be influenced by water vapor, fumes,sprays. Test air purifier in another clean.
Abnormal smell	Check if filter is out of effect or there are absorb pollutants releasing smells.Clean the filter according to our instructions

Abnormal sound	Make sure that the packaging has been completely removed. Make sure that there isn't any substance nearby inlet or outlet
Loud sounds	Check if the filter is no longer effective. Clean the filter according to the care instructions

Disposal

This device contains materials that must not be disposed of as household waste. Please check local laws concerning the applicable disposal regulations. Protect the environment by participating in recycling programs!



Declaration of Conformity

LEICKE GmbH herewith declares that the devices comply with the RED 2014/53/EU LVD 2014/30/EU and ROHS 2011/65/EC & 2015/863 & 2017/2102 regulations. The declaration of conformity can be found at:



www.leicke.com/de/products/LE59027

CONTACT

If you have any questions, please feel free to contact us.

LEICKE GmbH
Dohnanyistr. 28
04103 Leipzig
Germany

Web: www.leicke.com
Mail: info@leicke.com